

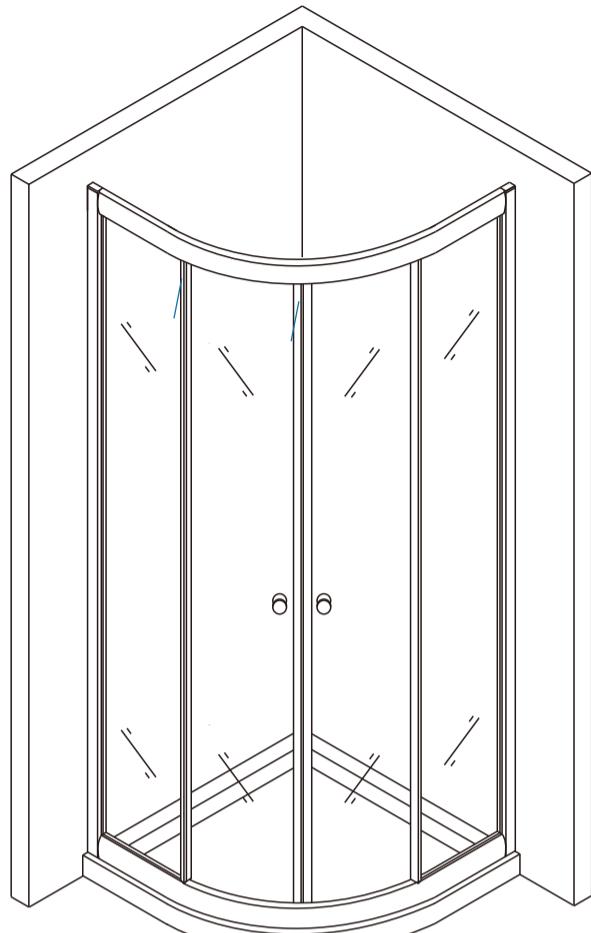


INSTALLATION MANUAL


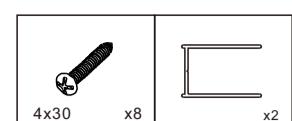


ATL-503

TOOL PICTURE

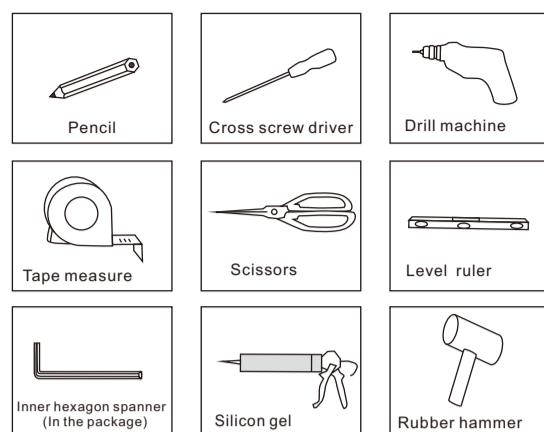







Accessory list

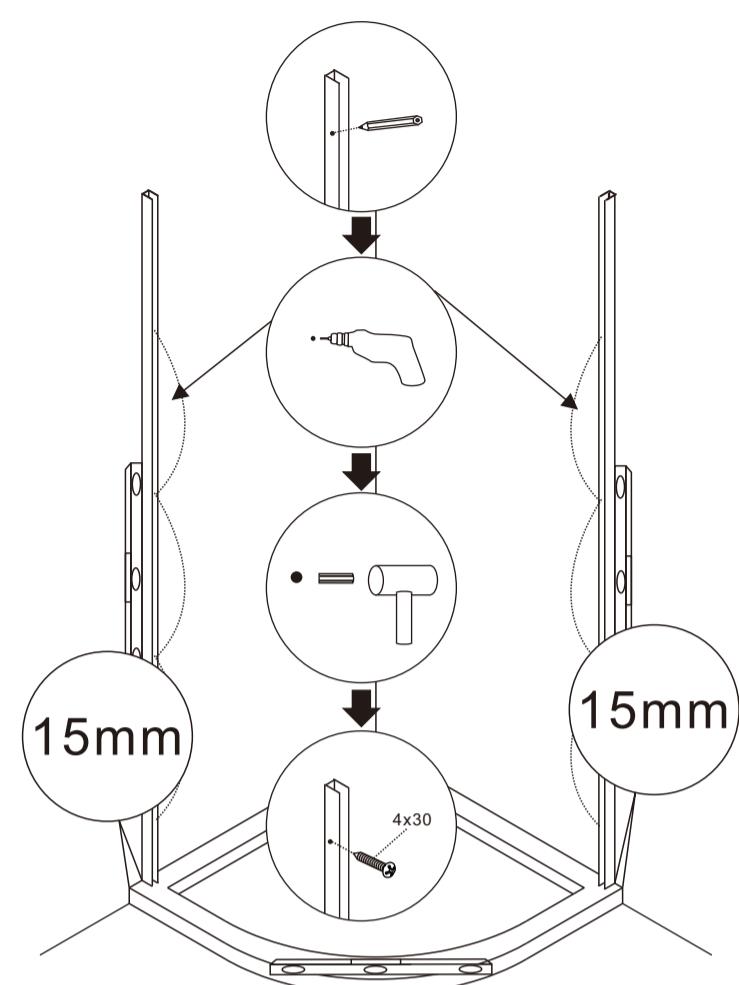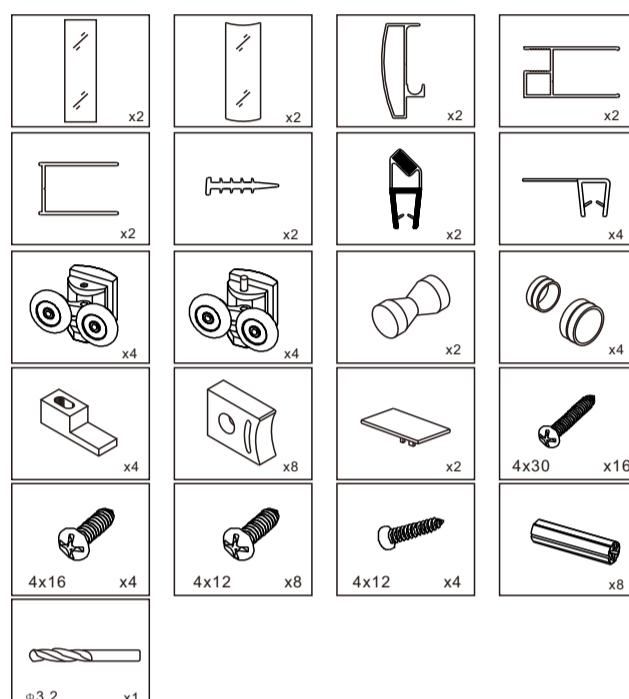

1

2

   
3

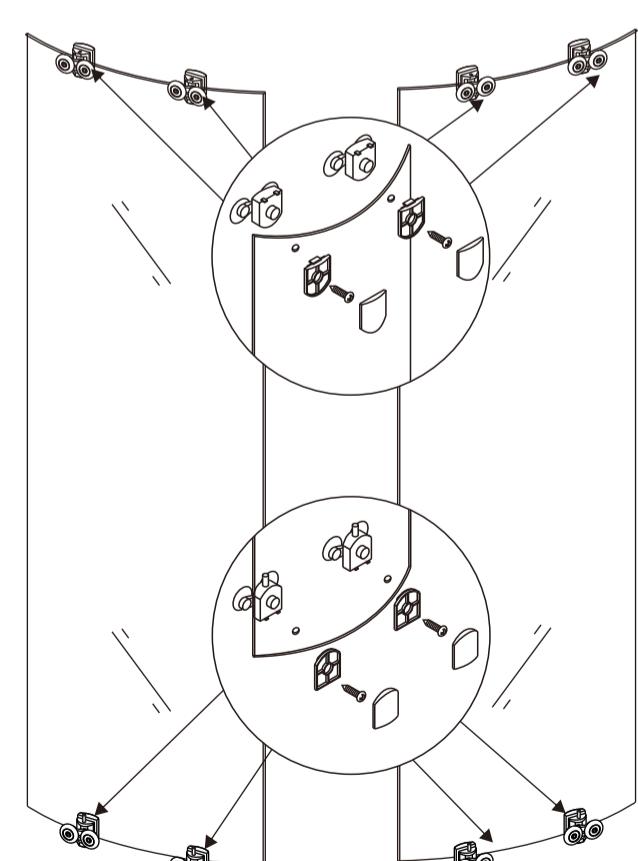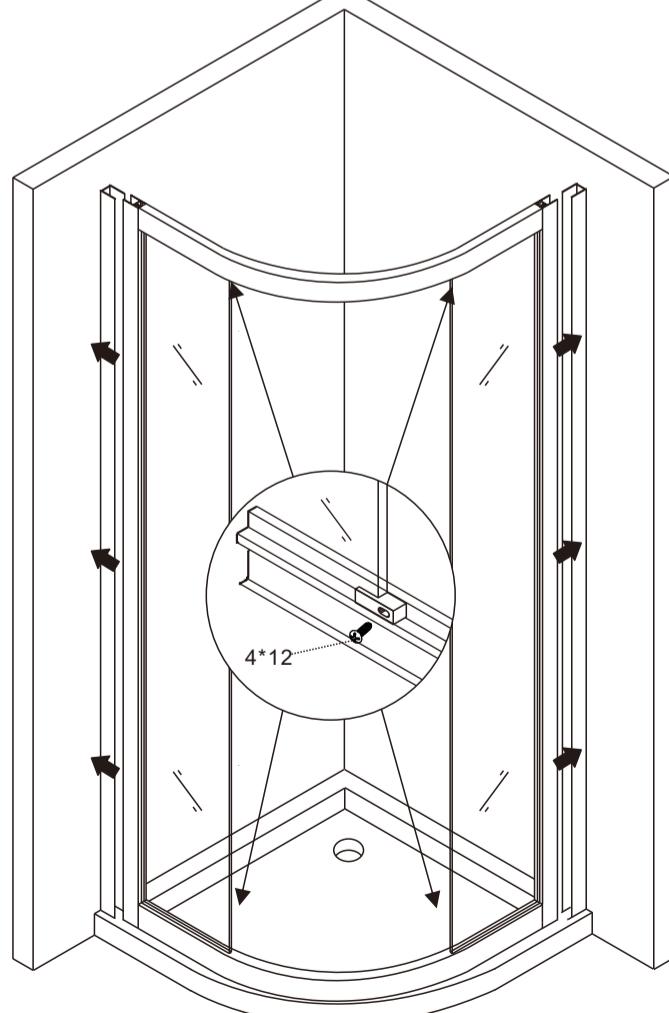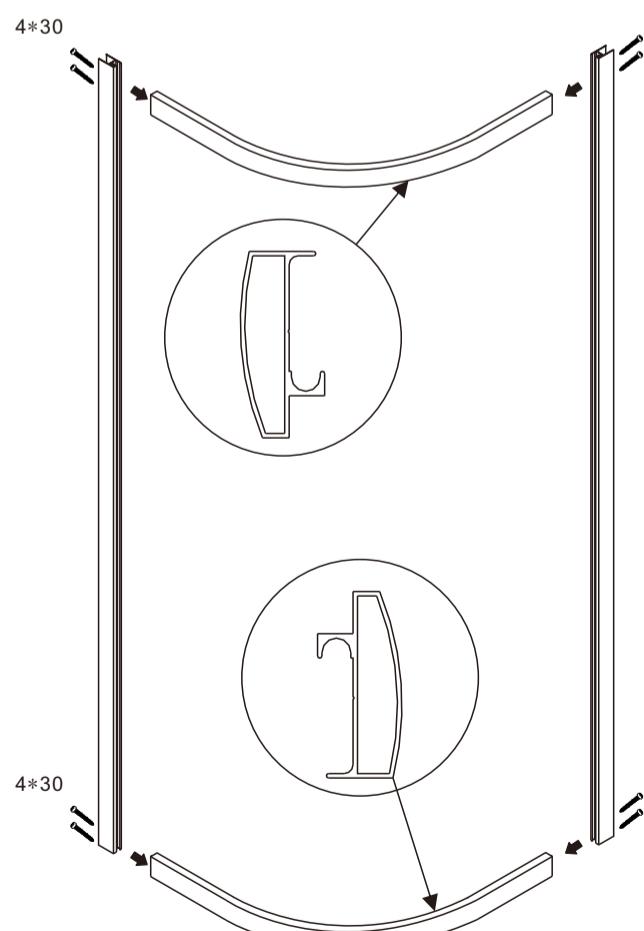



4

5



6

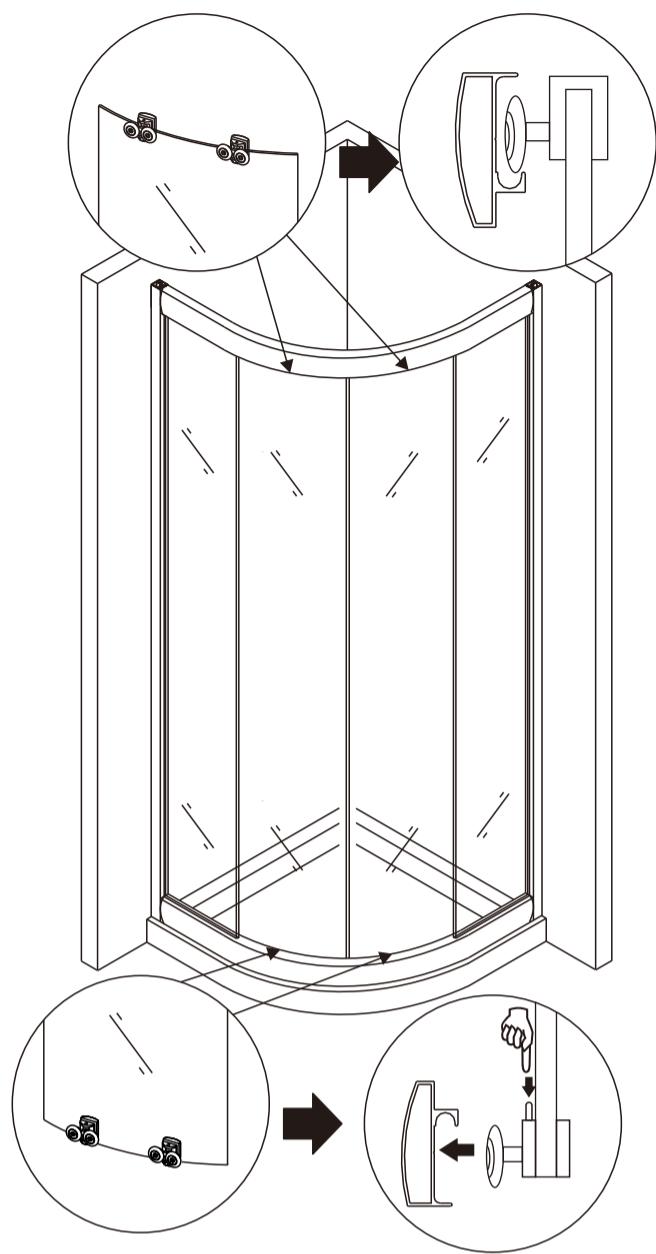




7

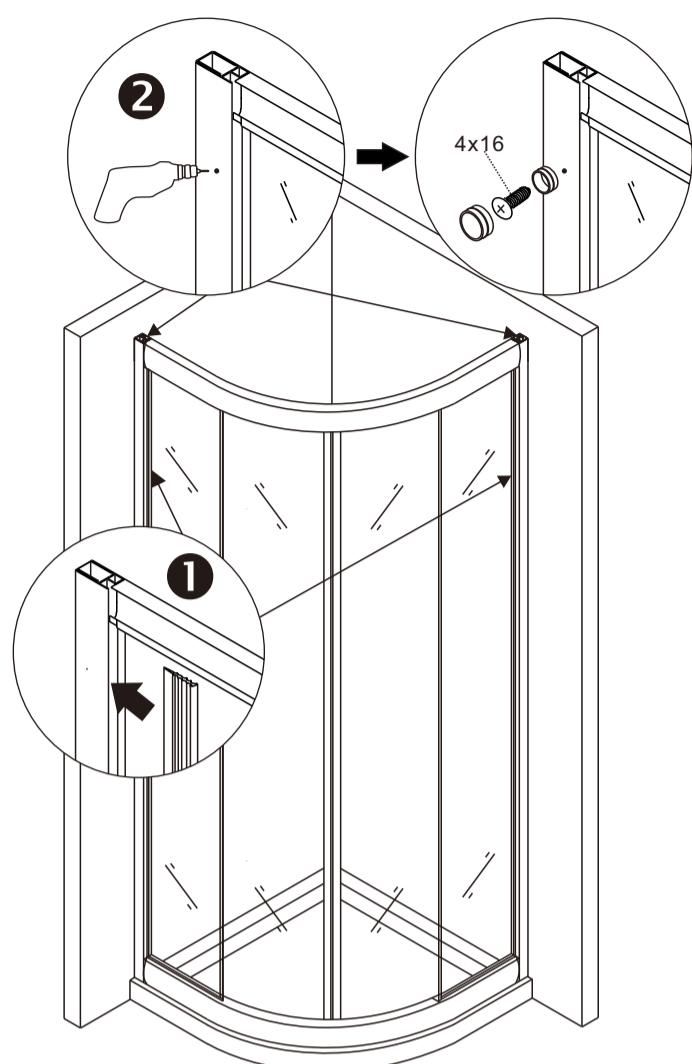 


8

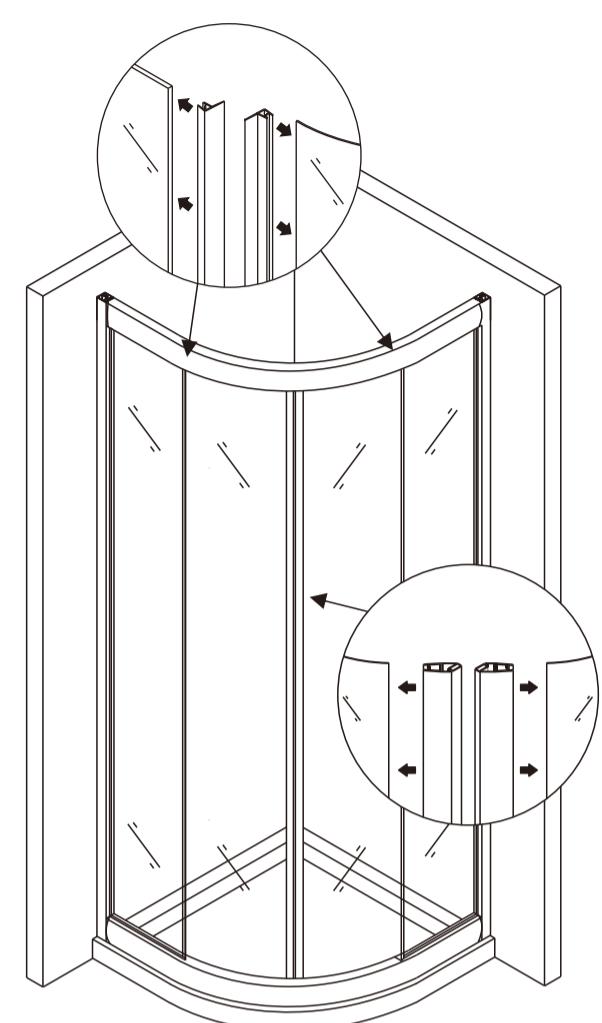 

9

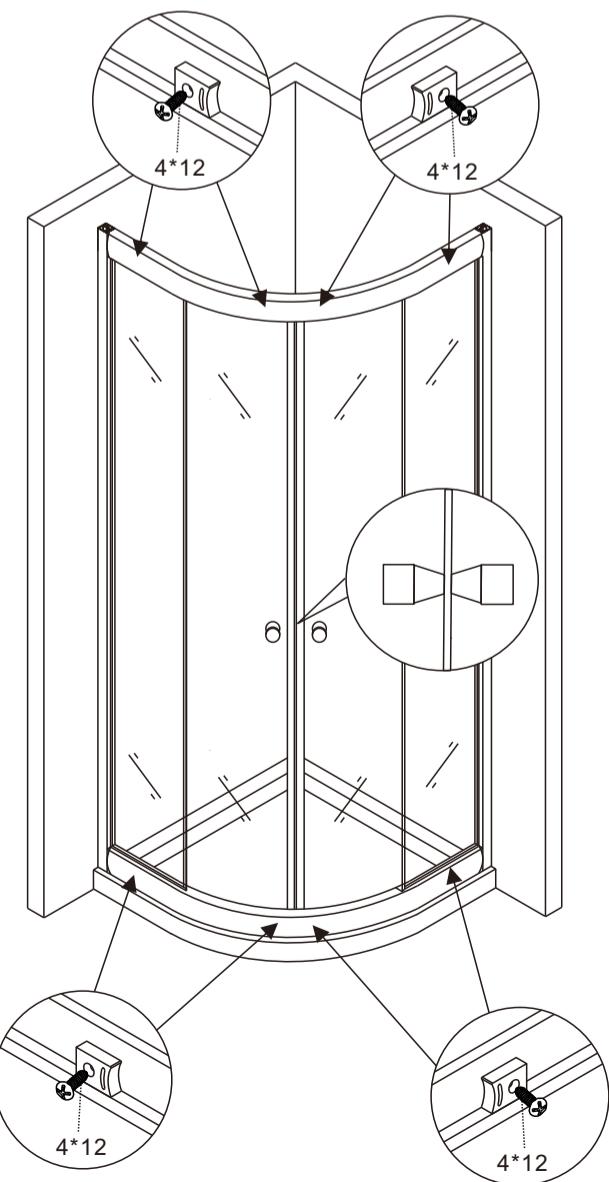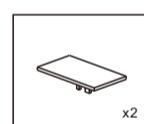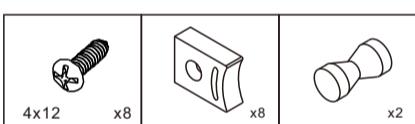

10

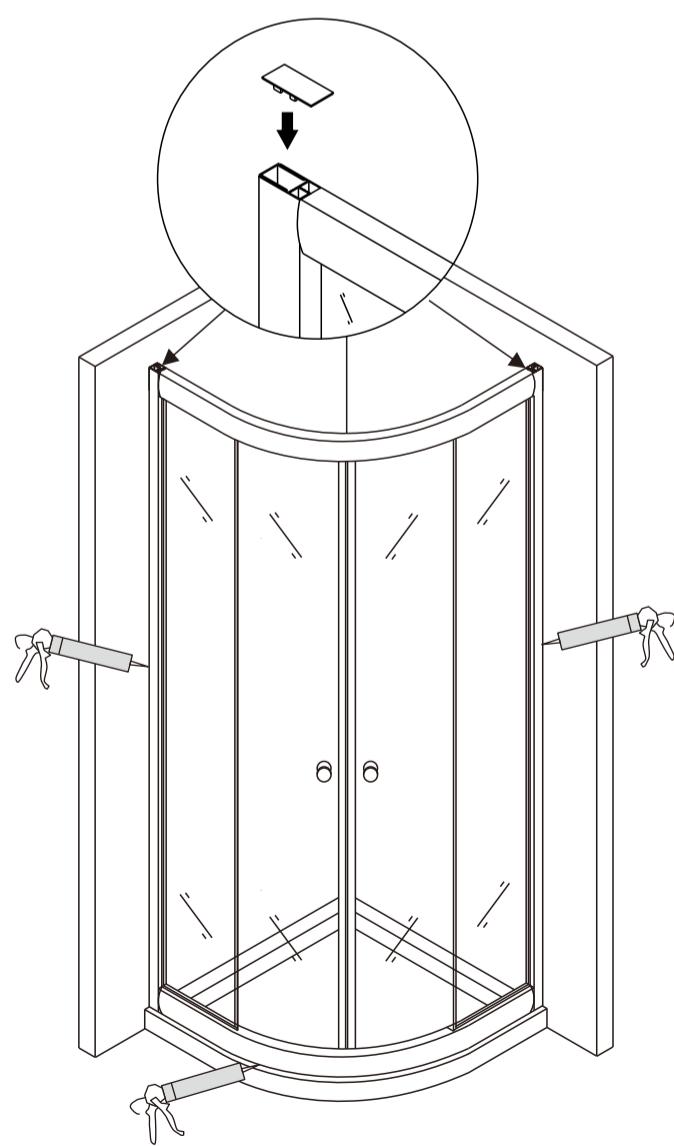

11

12

12