



INSTALLATION MANUAL

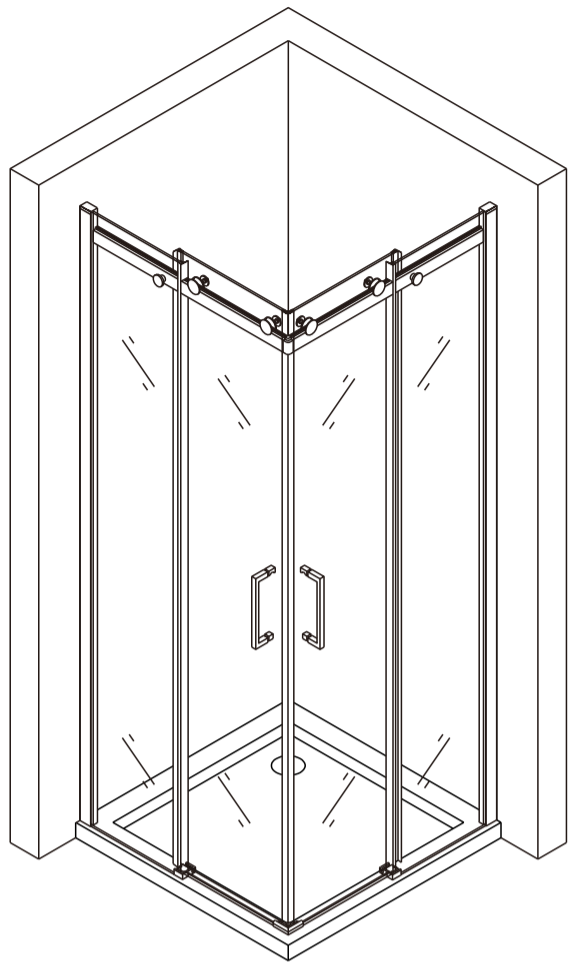

ATL-803

1



TOOL PICTURE

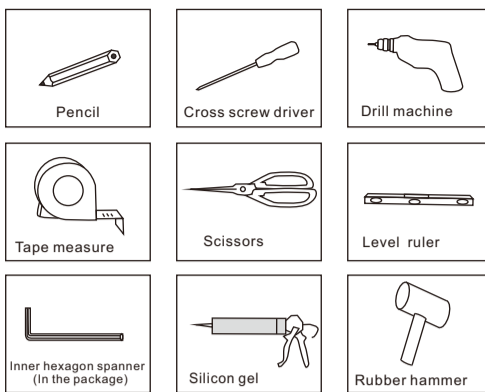



Accessory list

x2	x2	x2	x2
x2	x2	x2	x4
x4	x2	x2	x2
x2	x2	x2	x2
x1	x2	x1	x4
x6	4*30 x8	4*16 x4	4*12 x4
4*30 x4	4*10 x2	4*16 x3	x11
x3	$\phi 3.2$ x1		


 
2

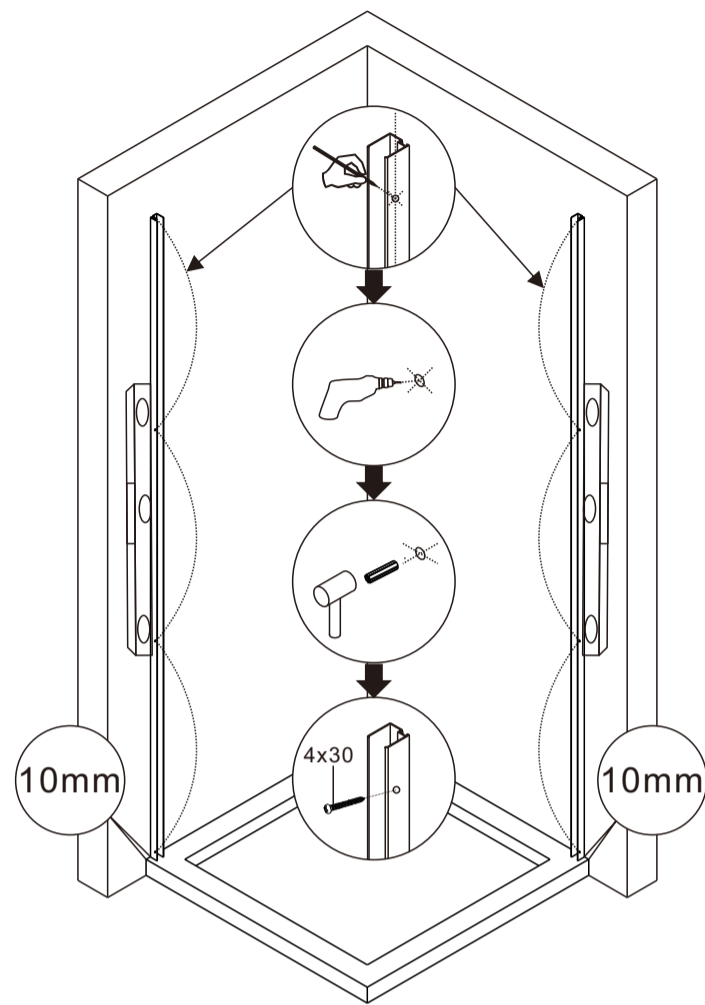


3

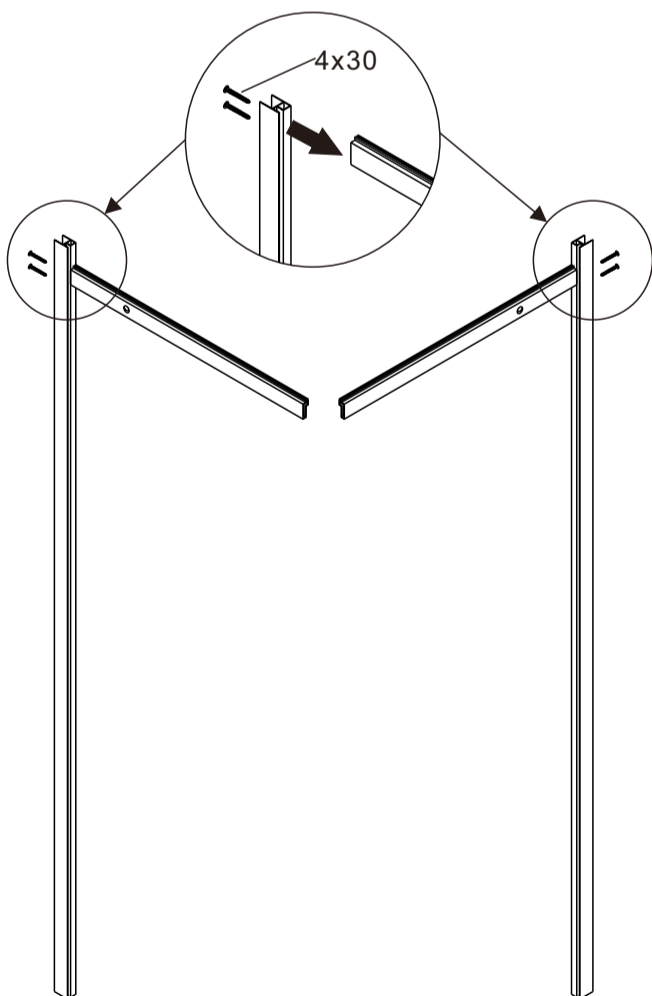 



4

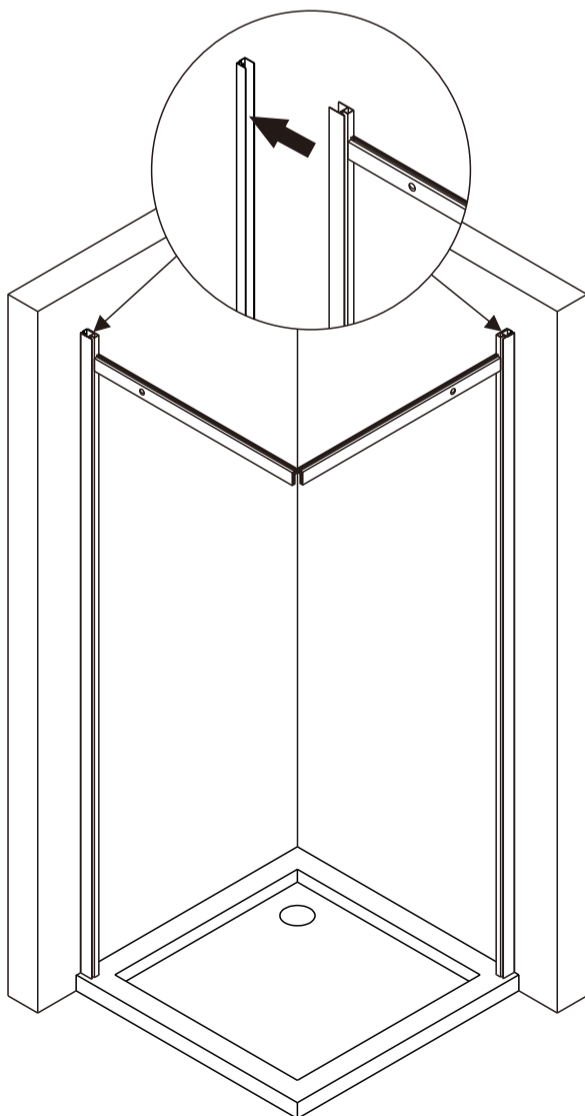 



5

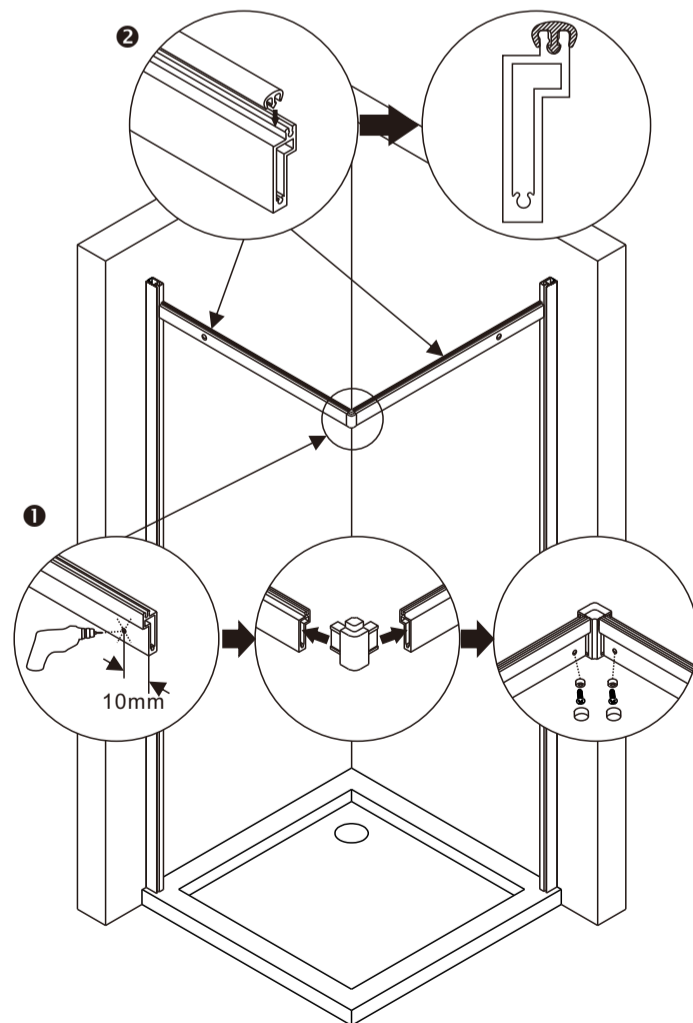



6

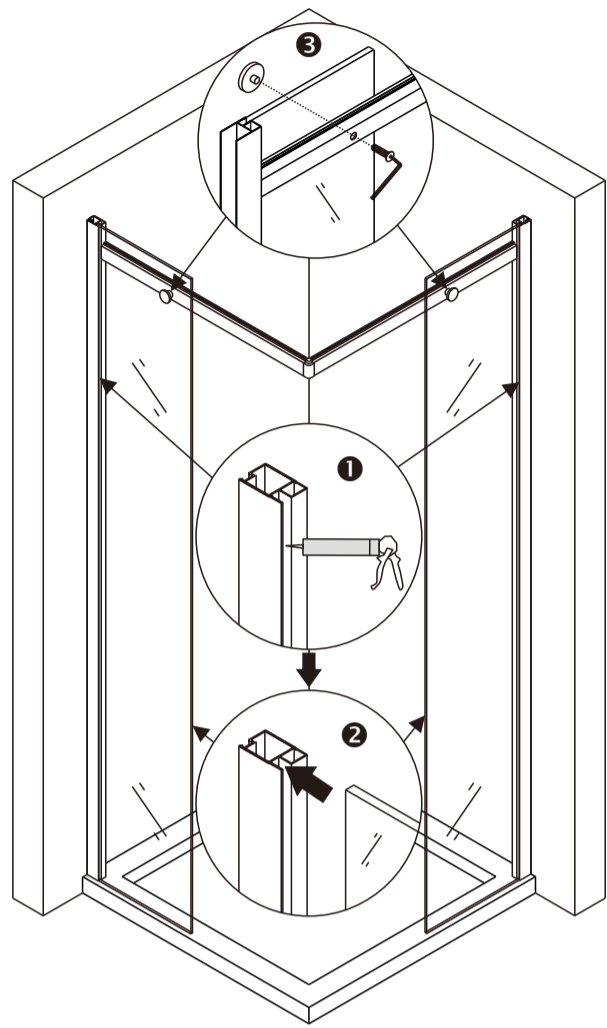 



7

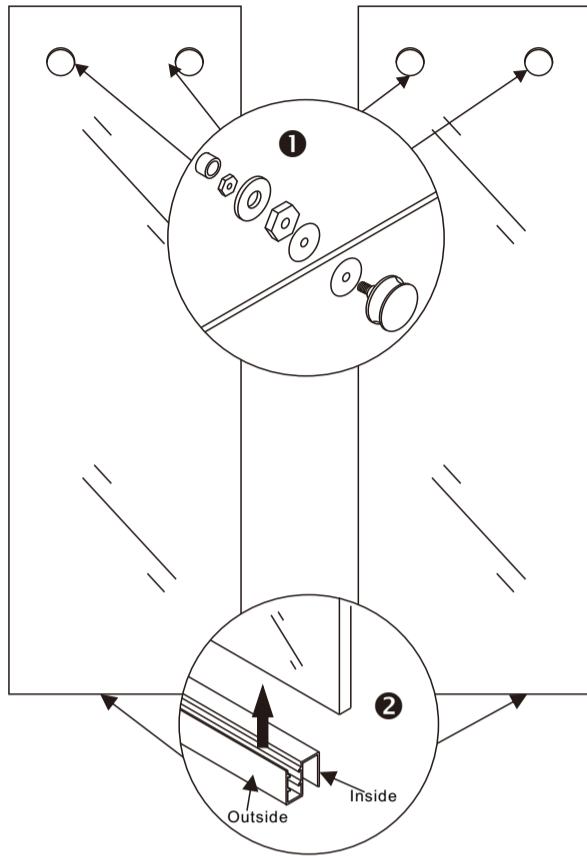 



8

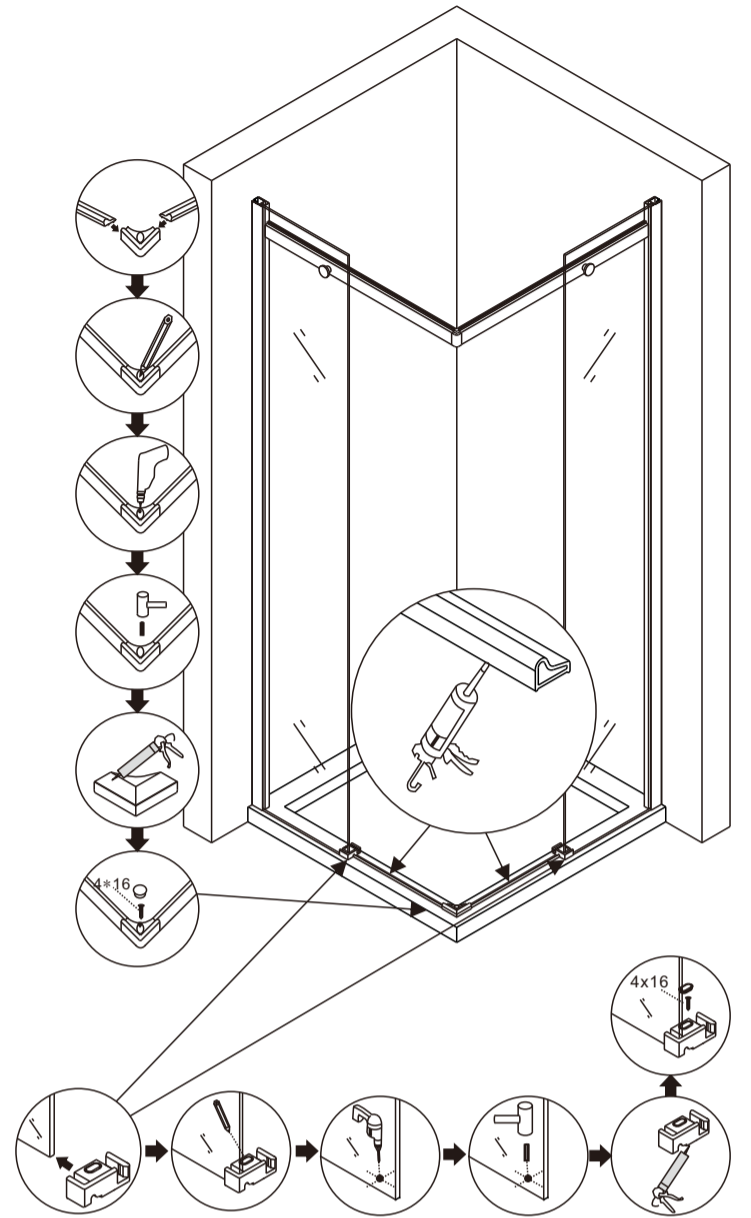 



9

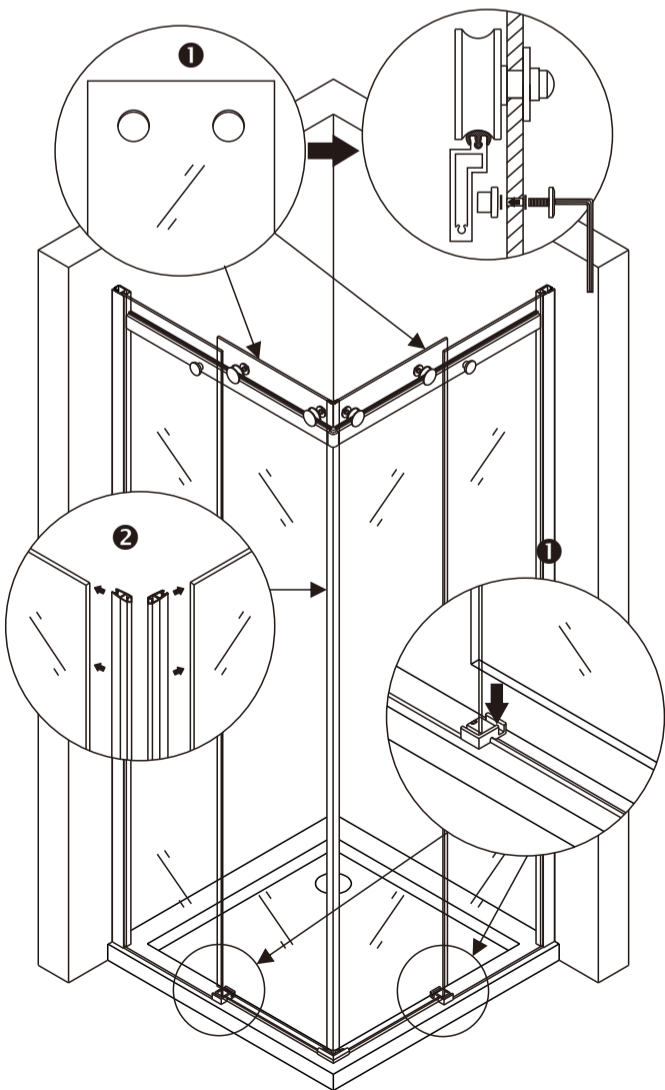 

10

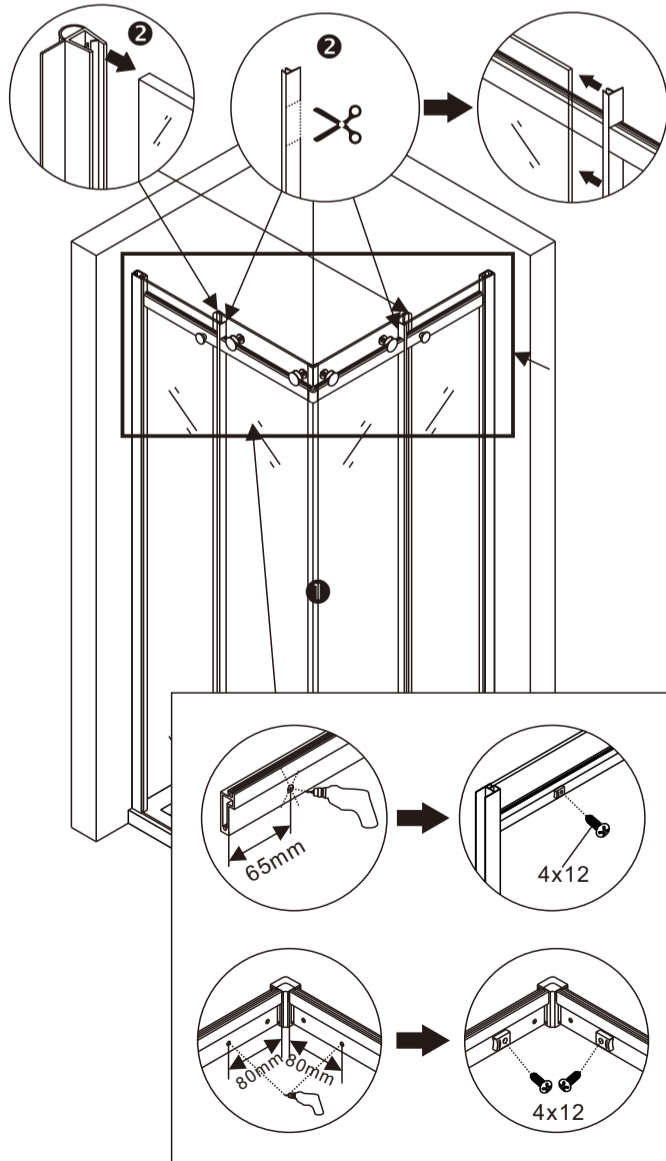 

11

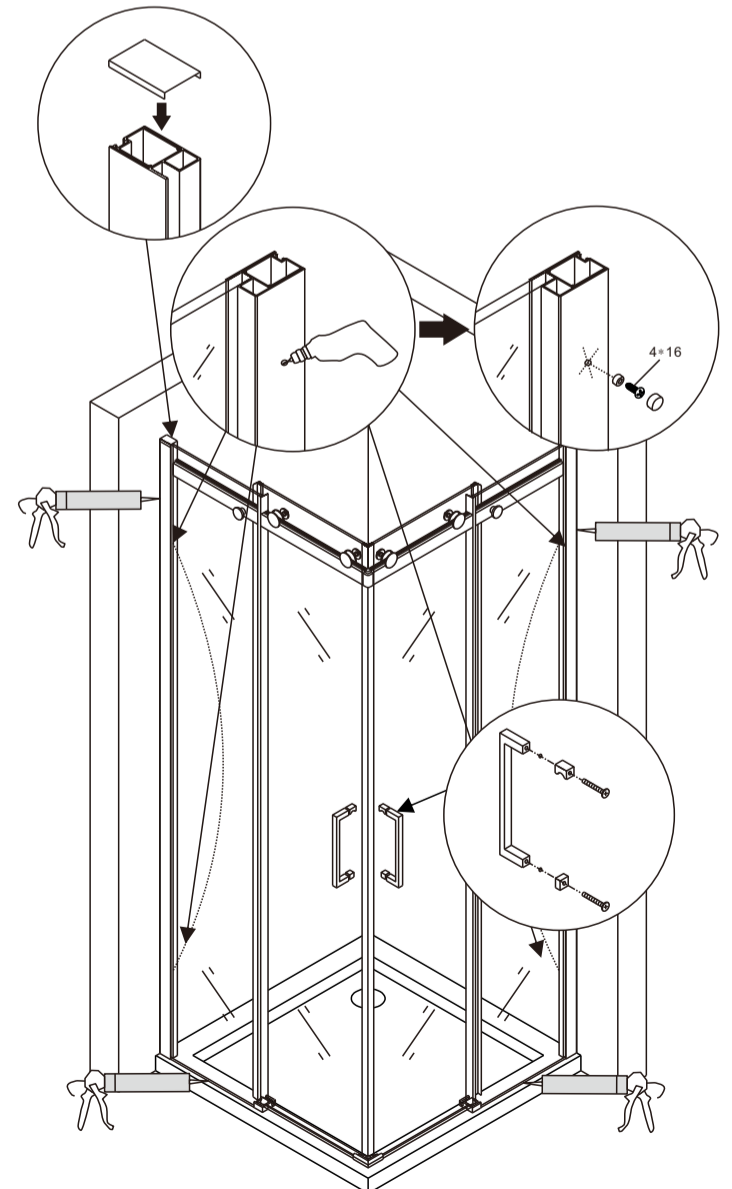 

12