
 
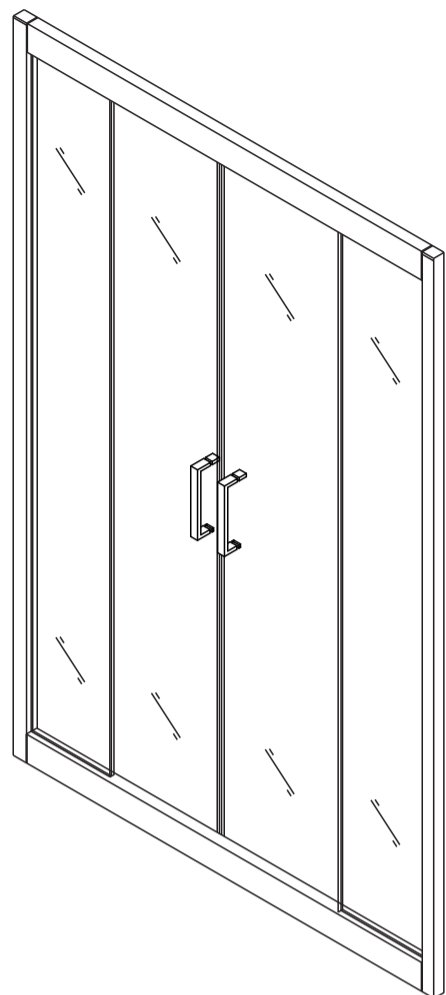

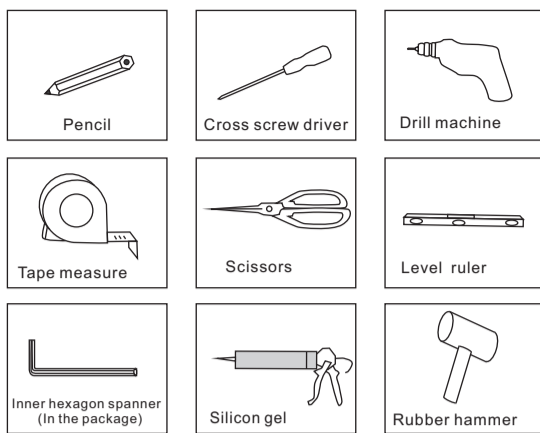


INSTALLATION MANUAL

TOOL PICTURE

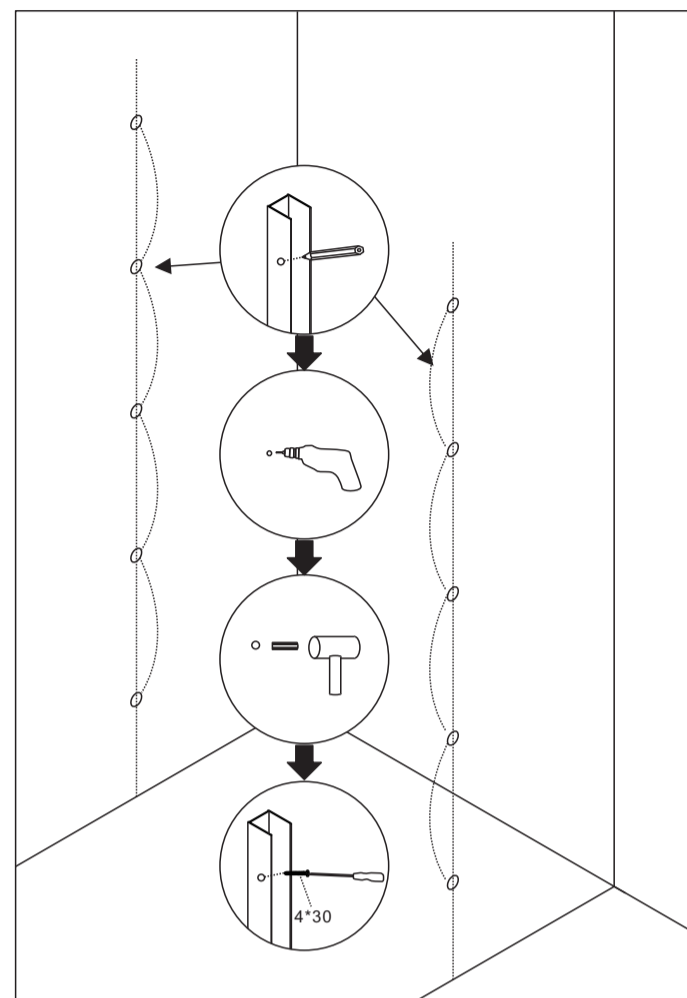

Accessory list


 
 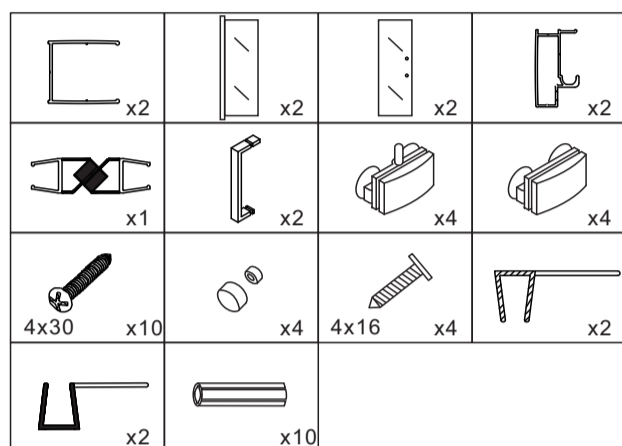


ATL-502B


1

2

3

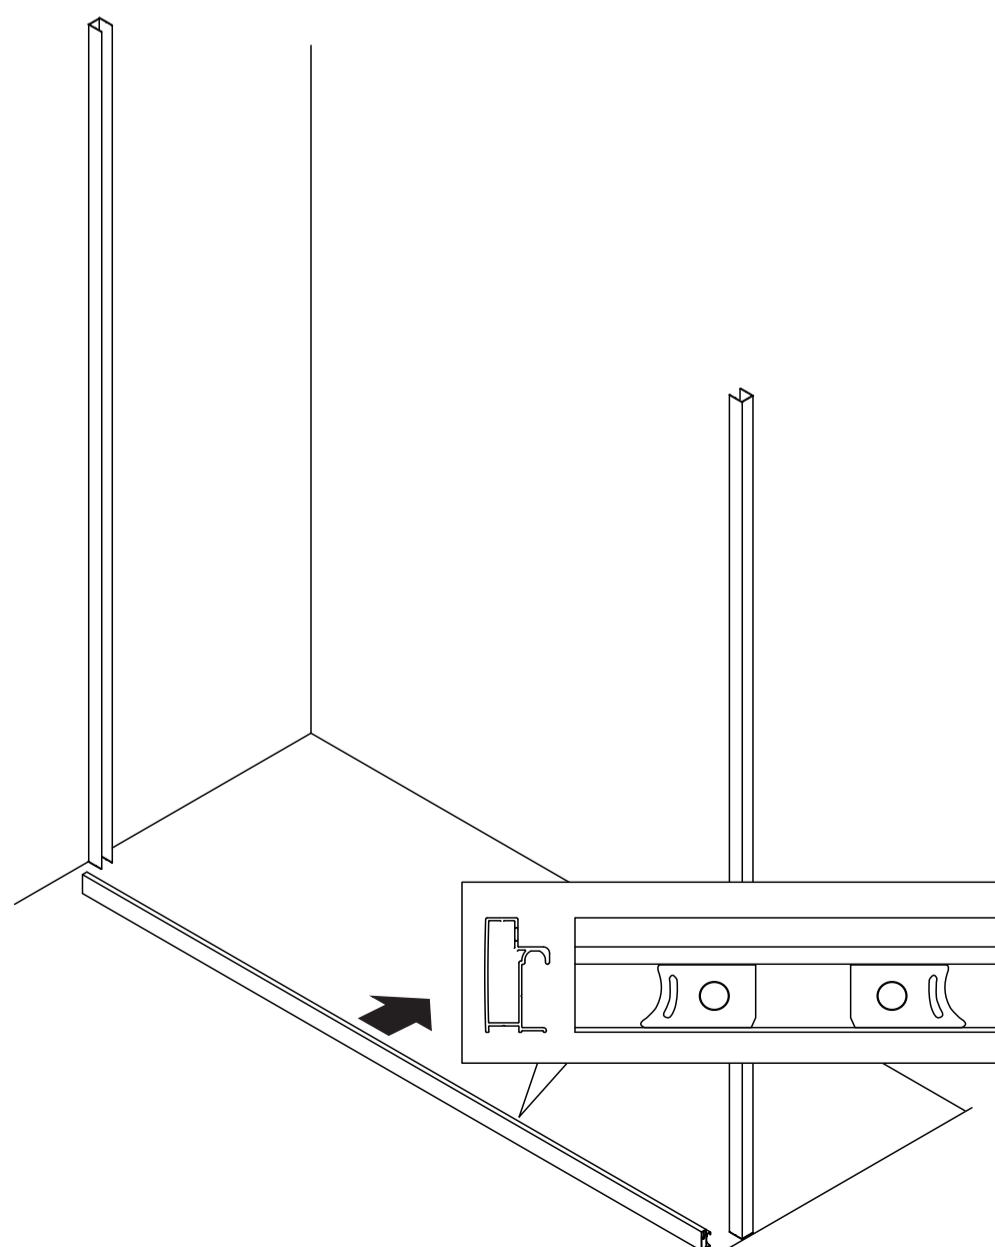

4

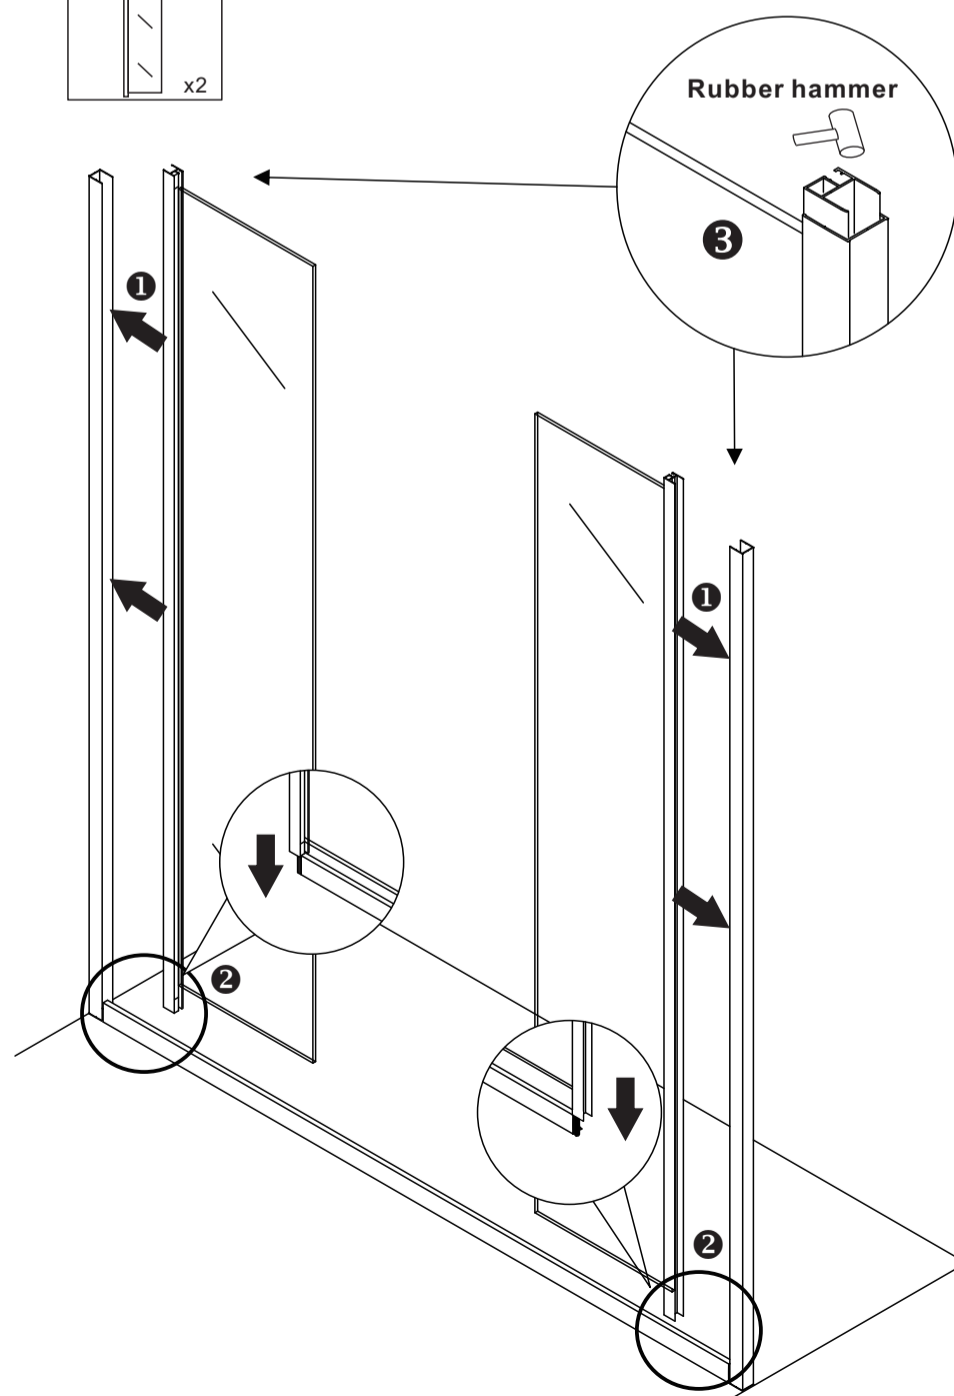

5

